

- I. TREES SHALL BE 2" CALIPER MINIMUM.
- 2. THE HOLE FOR THE TREE SHALL BE EXCAVATED 2-3 TIMES THE SIZE OF THE ROOT BALL.
- 3. STAKE ONLY IF NECESSARY AND AS DIRECTED BY THE PROJECT MANAGER.
- 4. REMOVE ANY TWINE, ROPE, FLAGGING, WRAPPING, OR GUARDS FROM TREE.
- 5. PRUNE ONLY DEAD OR BROKEN BRANCHES OR DOUBLE LEADERS AT TIME OF PLANTING.
- 6. ROOTBALL ROOT COLLAR SHALL BE VISIBLE.
  REMOVE EXCESS SOIL FROM TOP OF BALL IF
  NEEDED. SET TOP OF BALL I" TO 2" ABOVE FINISHED
  GRADE TO ALLOW FOR SETTLING. AFTER SETTING
  BALL IN PLANTING HOLE, CUT AWAY OR REMOVE THE
  ENTIRE WIRE BASKET. CUT OR REMOVE ALL ROPES
  OR TWINE FROM BALL. CUT AWAY OR REMOVE
  BURLAP. IF ROOTBALL BEGINS FALLING APART
  DURING INSTALLATION OR WHILE REMOVING THE WIRE
  BASKET, CUT AWAY ONLY HALF OF THE BURLAP.

SET TREE PLUMB SO THE MAIN LEADER IS STRAIGHT

BEGIN MULCH 3" TO 4" AWAY FROM TRUNK

3" TO 4" OF ORGANIC MULCH.
NO CYPRESS MULCH SHALL BE USED.


BUILD 4" HIGH EARTHEN RING AT THE OUTER EDGE OF TREE'S DRIPLINE

EXCAVATE AND REPLACE EXISTING SOIL. ADD SOIL AMENDMENTS IF NECESSARY AS DIRECTED BY PROJECT MANAGER. WATER THOROUGHLY TO ELIMINATE AIR POCKETS. DO NOT TAMP.

WIDE SHALLOW HOLES WITH TAPERED SIDES.
BREAK DOWN OR ROUGHEN SIDES OF THE HOLE.

SET BALL ON FIRM SOIL

UNDISTURBED SUBGRADE

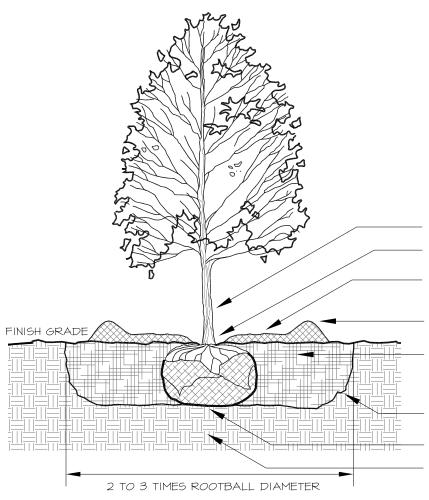

TREE PLANTING DETAIL

NOT TO SCALE